



GUBI

GUBI Leather Collection


Tangier

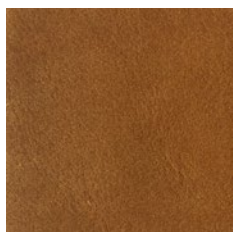


0250 Chestnut

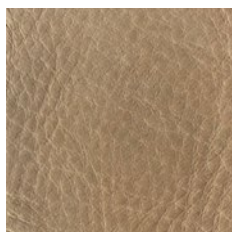


0197 Corn

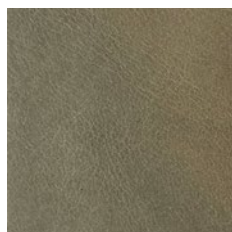


0854 Mist Green

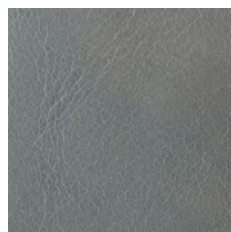


08079 Arctic

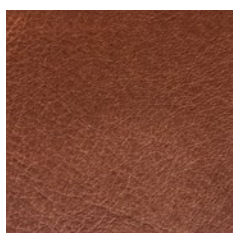


0229 Rust

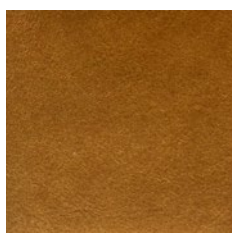


0551 Ochre

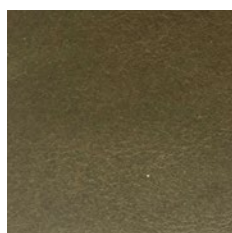


0691 Moss

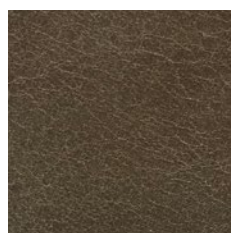


0311 Mud

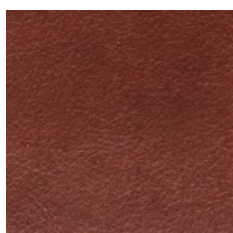


04010 Rosewood

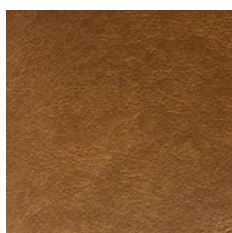


0549 Cinnamon

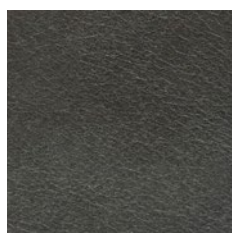


0855 Stone

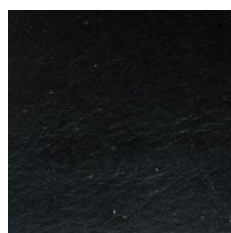


0842 Black

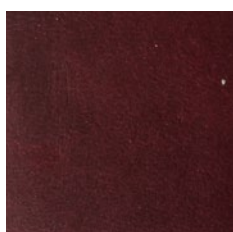


04147 Merlot

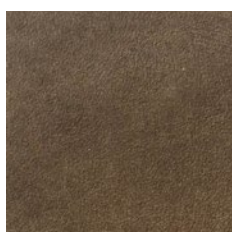


0258 Mocca

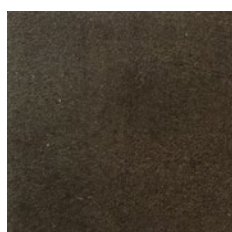


06048 Umber

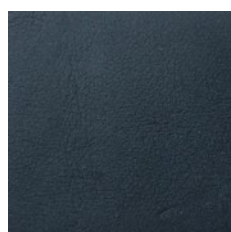


0780 Stormy Blue

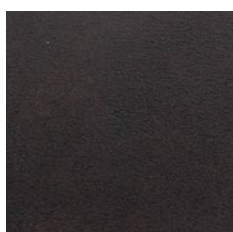


0329 Dark Brown

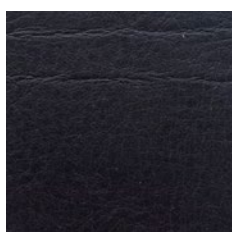

0738 Purple Noir

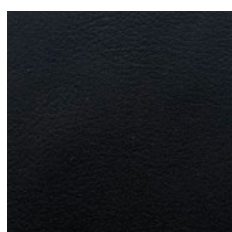

03009 Ebony

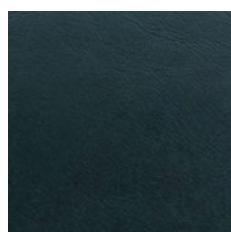

0681 Pine

Basic

Type Corrected leather

Thickness 0.9-1.1 mm

Size Average 3.75 m²

Origin India

Tannage Chrome

Dry flexing resistance / number of motions ≥ 20.000 cycles

Fastness to light ≥ 5

Rubbing resistance, dry, 500 cycles ≥ 4

Rubbing resistance, wet, 250 cycles ≥ 3/4

Tear strength ≥ 20

Fire tests -

Tangier

Type Corrected leather

Thickness 1.0-1.2 mm

Size 4.8-5.0 m²

Origin Italy

Tannage Chrome

Dry flexing resistance / number of motions ≥ 30.000 cycles

Fastness to light ≥ 3

Rubbing resistance, dry, 100 cycles ≥ 4

Rubbing resistance, wet, 20 cycles ≥ 4

Tear strength ≥ 20

Fire tests Cigarette test (California)

Chamois

Type Aniline dyed, nubuck finishing

Thickness 1.2 - 1.4 mm

Size Average 5.0 m²

Origin Italy

Tannage Chrome

Dry flexing resistance / number of motions ≥ 50.000 cycles

Fastness to light ≥ 2

Rubbing resistance, dry, 50 cycles ≥ 3

Rubbing resistance, wet, 10 cycles ≥ 3

Tear strength ≥ 20

Fire tests -

Care & Cleaning

Avoid bar soap, saddle soap, leather cleaners, household detergents or chemical products.
Protect from direct sunlight, excessive heat and sharp objects.